



CR3 Wiring Diagram





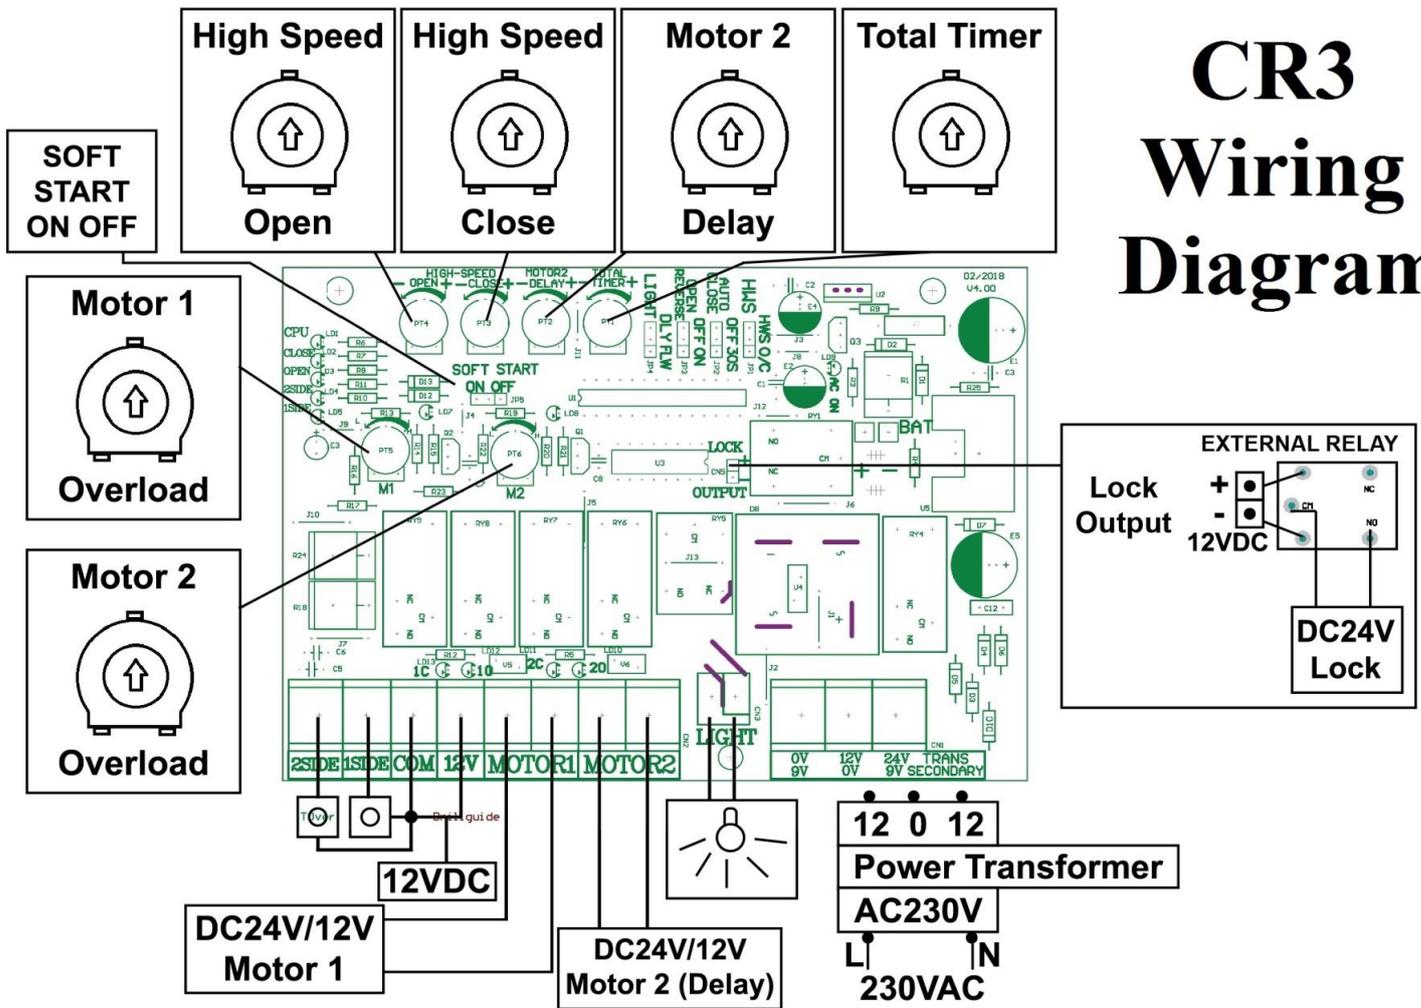


		Function options	Description	Application Notes
JP1		HWS	Open, Stop & Close	
		OP/CL	Open & Close only	
JP2	Auto Close	30 Second	Gate auto close after remained open for 30 seconds	
		Off	Select if function not required	
JP3	Open Reverse	On	Open Reverse enabled	When enabled, the movement of the gate is first reversed, then open
		Off	Open Reverse disabled	
JP4	Light	Follow	Light status & motor movement in parallel	Light is on when motor is on, light is off when motor is stopped
		Delay	Light status is set to be off after a delay of 60 seconds	When gate is closed, light will be off after 30 seconds
JP5	Soft Start	On	Soft Start enabled	Firmware Run at 3speed Slow → Fast → Slow
		Off	No Soft Start function	


CR3 V8 Wiring Diagram

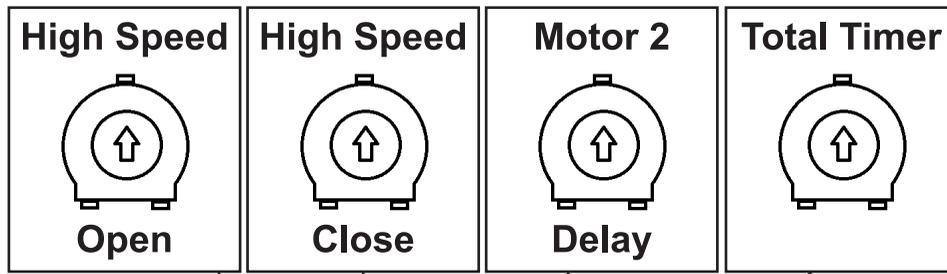

SOFT START ON OFF

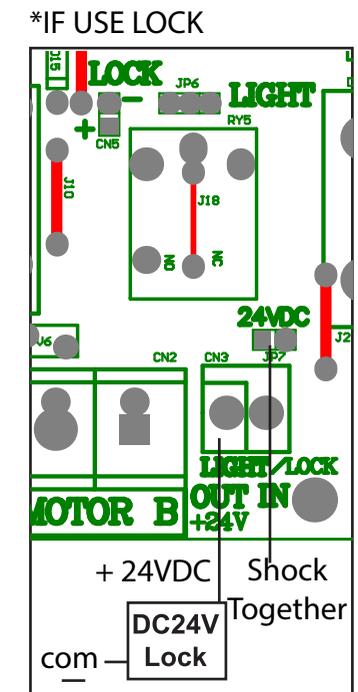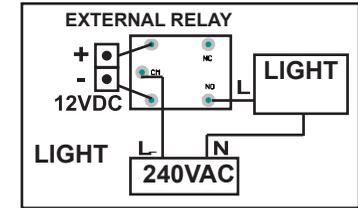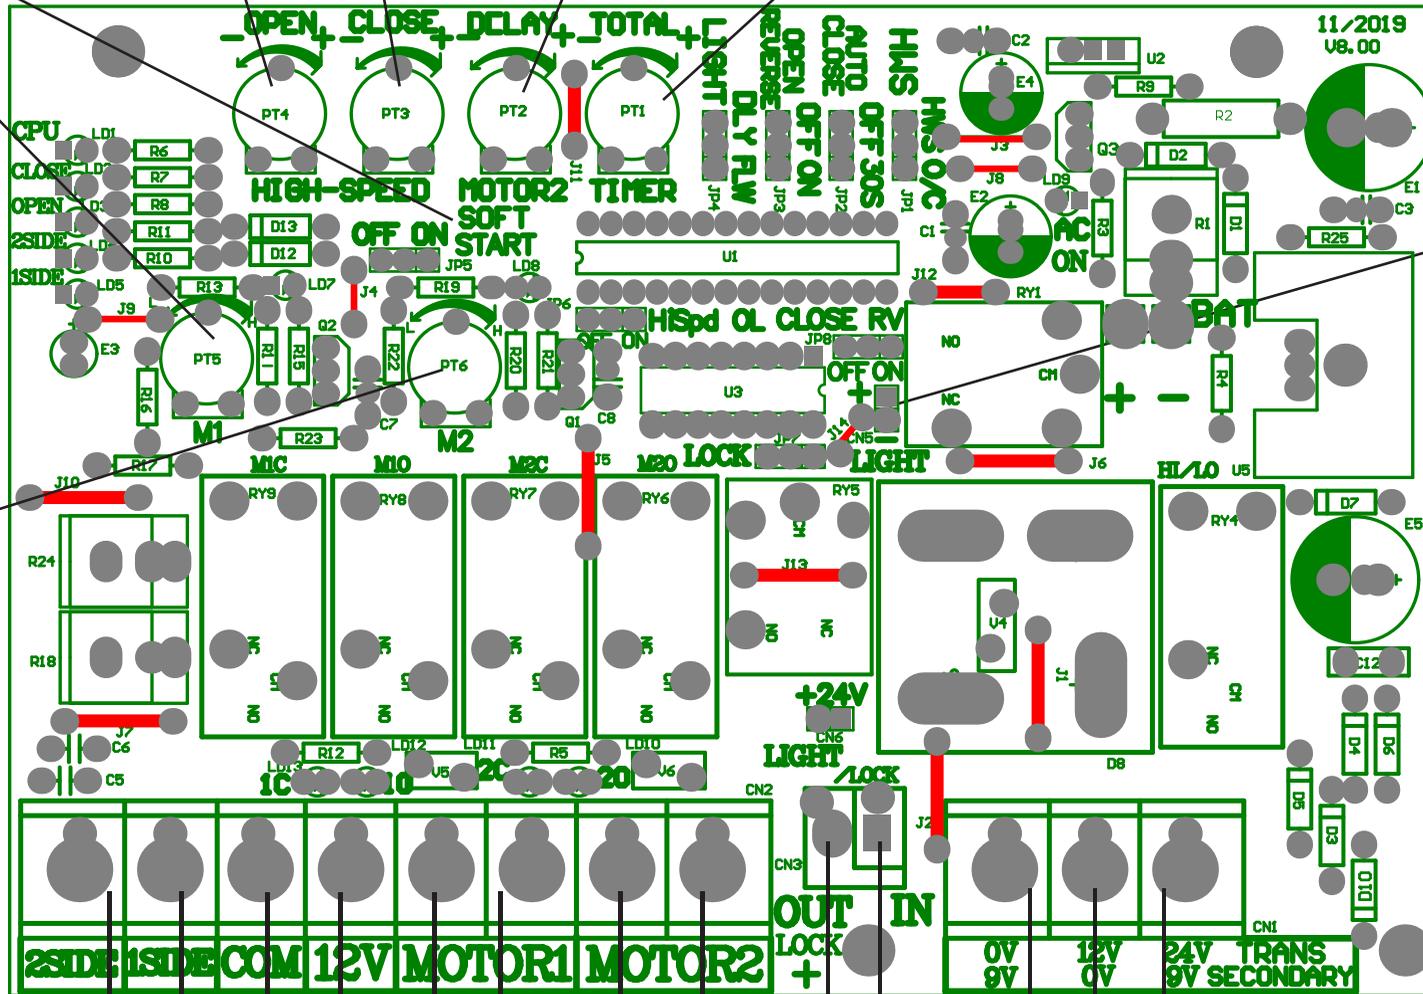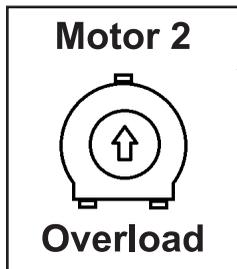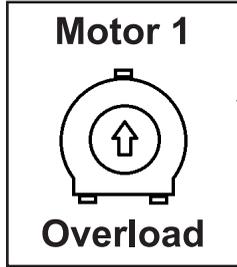

CR3b Wiring Diagram

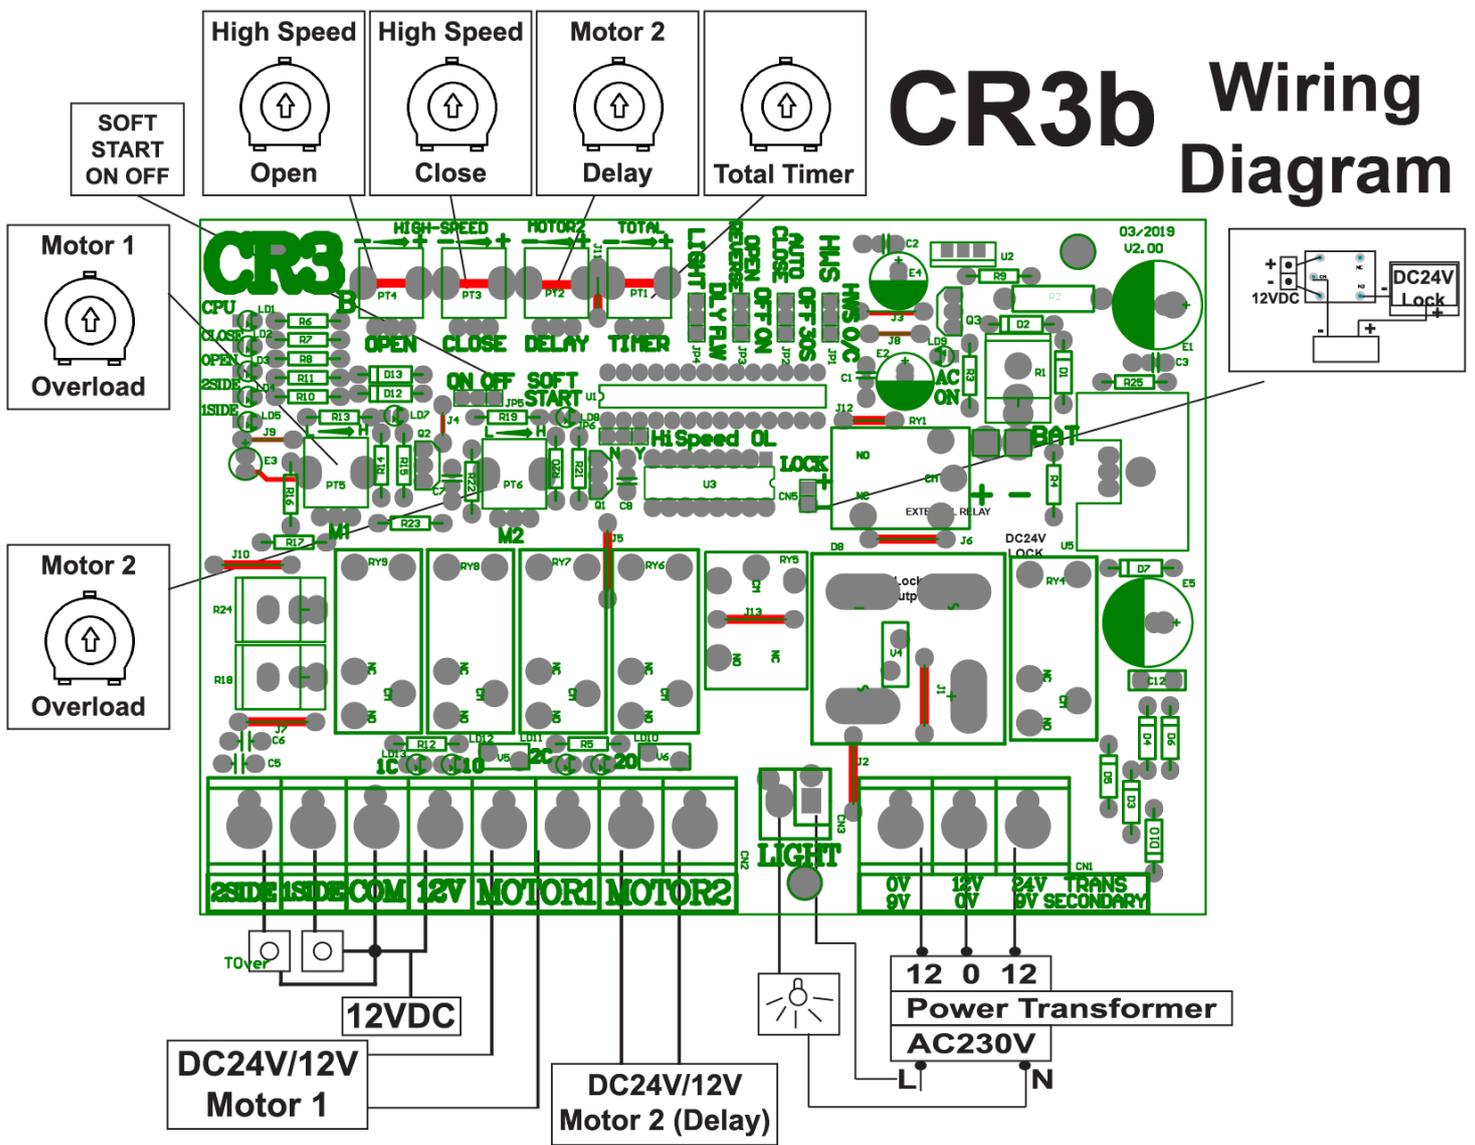

Function options		Description	Application Notes
JP1	HWS	Open, Stop & Close	
	OP/CL	Open & Close only	
JP2	30 Sec	Gate auto close after remained open for 30secs	
	OFF	Select if function not required	
JP3	ON	Open Reverse enabled	If on, the movement of the gate is first reversed, then open
	OFF	Open Reverse disabled	
JP4	Follow	Light status & motor movement in parallel	Light is on when motor is on, light is off when motor is stopped When gate is closed, light will be off after 30 sec
	Delay	Light status is set to be off after a delay of 30 seconds	
JP5	ON	Soft Start enabled	Firmware Run at 3speed Slow → Fast → Slow
	OFF	No Soft Start function	
JP6	ON	Hi Speed Over Load ON	
	OFF	NO Hi Speed Over Load	