

Development |  



DISARM ALL

ARM ALL

PANIC

Show all 

Mode 1



Mode 2



Mode 3



Mode 4



Mode 5



Mode 6



Mode 7



Mode 8



Mode 9



Mode 10



Favourite



Home



Security



Scene

Development | 



DISARM ALL

ARM ALL

PANIC

Show all



Mode 1

**Long Press**



Mode 2



Mode 3



Mode 4



Mode 5



Rename mode

Set property

Assign sensor

Factory Reset

Assign camera

Cancel

Development |  



DISARM ALL

3 ARM ALL

PANIC

Show all

## Rename mode

Night Mode

Cancel

OK

Mode 4

Mode 5

Mode 6

Mode 7

Mode 8

Mode 9

Mode 10



Favourite



Home



Security



Scene

Development |  



DISARM ALL

ARM ALL

PANIC

Show all

4

Night Mode

Long Press

Mode 2

Mode 3

Mode 4

Mode 5

Rename mode

Set property

Assign sensor

Factory Reset

Assign camera

Cancel



# Night Mode



5

There is no sensor being assigned yet, please  
assign sensor first

**Select sensor**



## Select sensor

Save



Default room



6



## Select sensor

**Save**

☐ Default room 7 

☒  Contact Sensor

☒  Sally Room Window

☒  Main Door

☒  Contact Sensor 02

☐  Motion Sensor

☐  Motion Sensor 04

**Select Sensors that  
you want to assign  
to this mode  
(partition)**



# Night Mode



Contact Sensor



Sally Room Window



Main Door



Contact Sensor 02



8



Development |  

SN0000003A



DISARM ALL

ARM ALL

PANIC

Show all

9



Night Mode

Long Press

1



Away Mode



Mode 3



Mode 4



Mode 5



Rename mode

Set property

Assign sensor

Factory Reset

Assign camera

Cancel





# Night Mode

Save

Siren sound

10

Default

Dog bark

Select the siren sound produced when this night mode (partition) is triggered.

0

Exit timer (second)

0

Siren timer (minute)

5

Siren timer is the duration that the siren activate when this night mode (partition) is triggered. By default, when the alarm is triggered, the siren will be activated for 5 mins. After 5 mins, siren will stop.

